

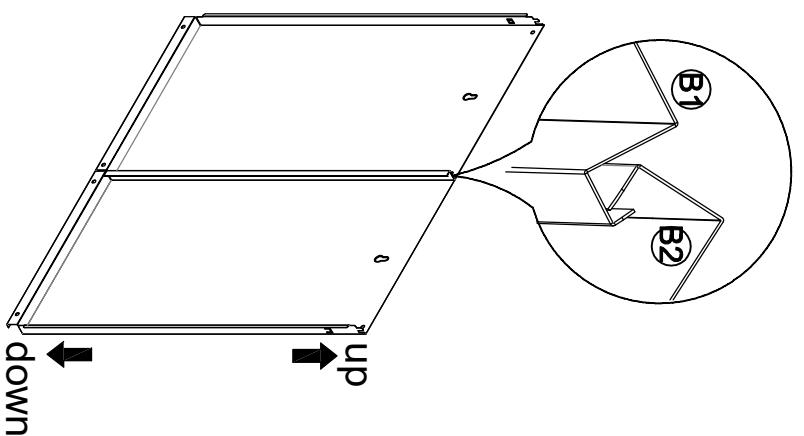
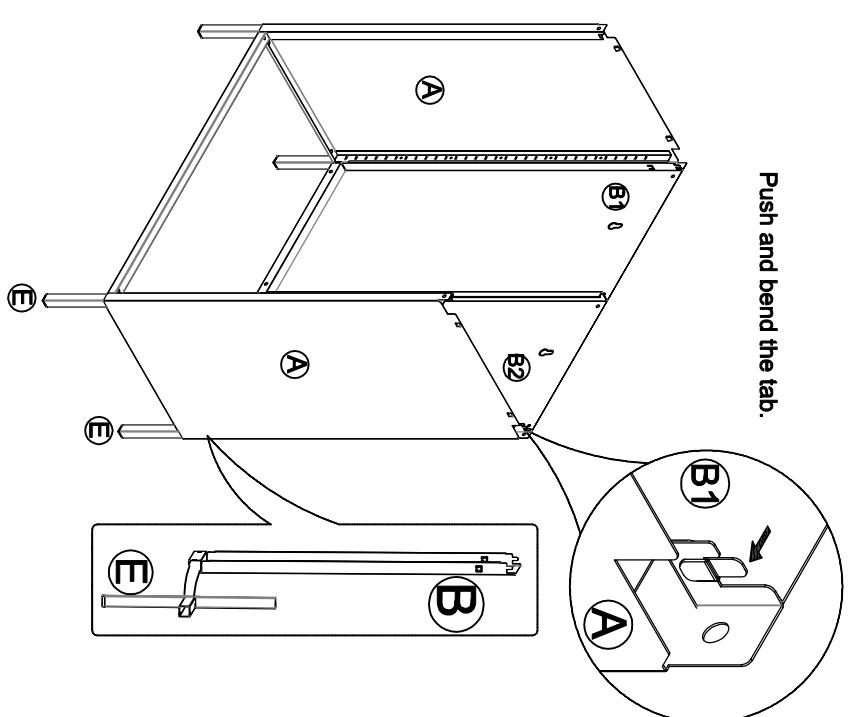
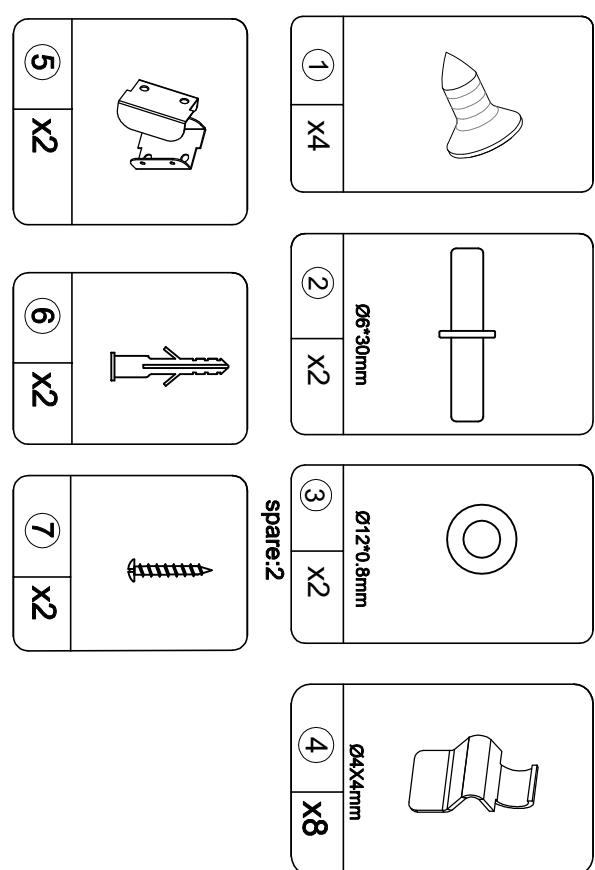
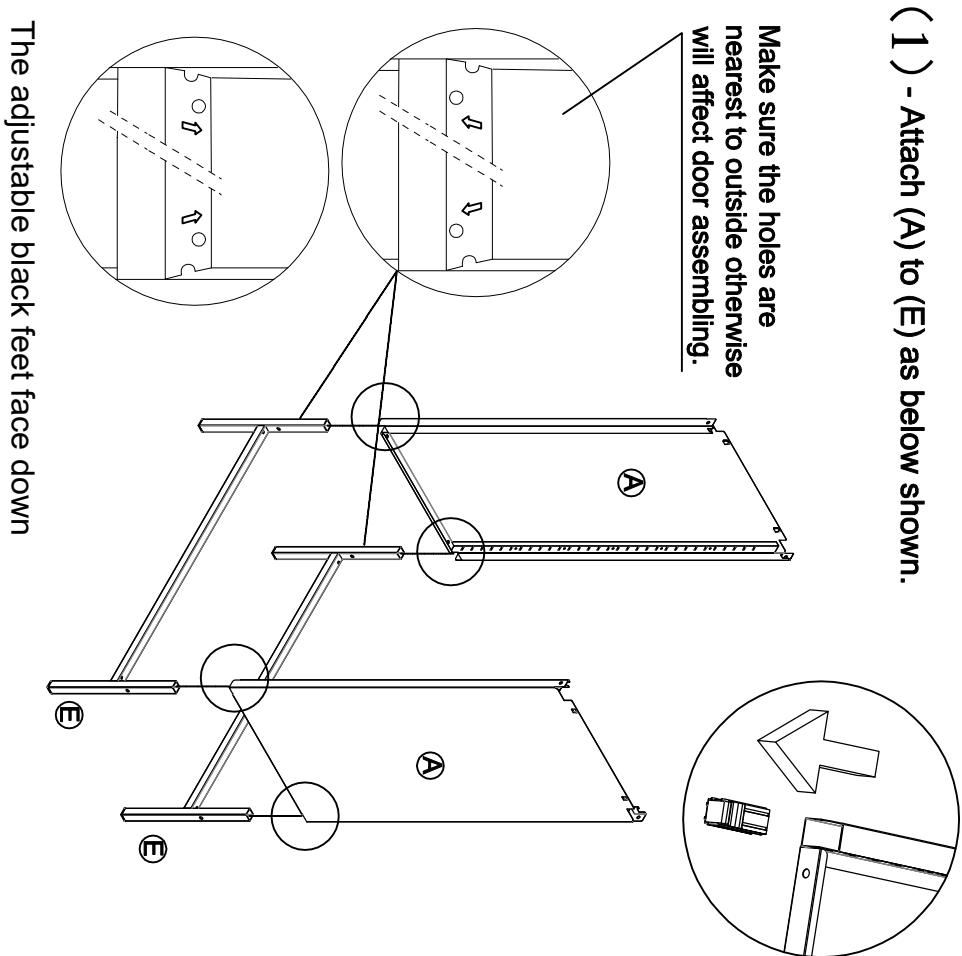
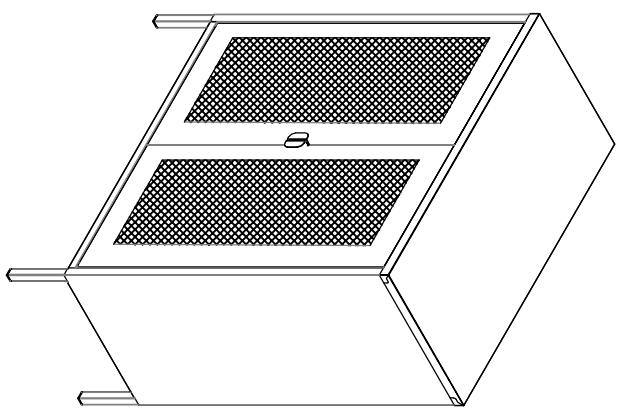


3001080
Melbourne Steel Cabinet
w. Mesh Door Black


**H
OUSE
NORDIC**

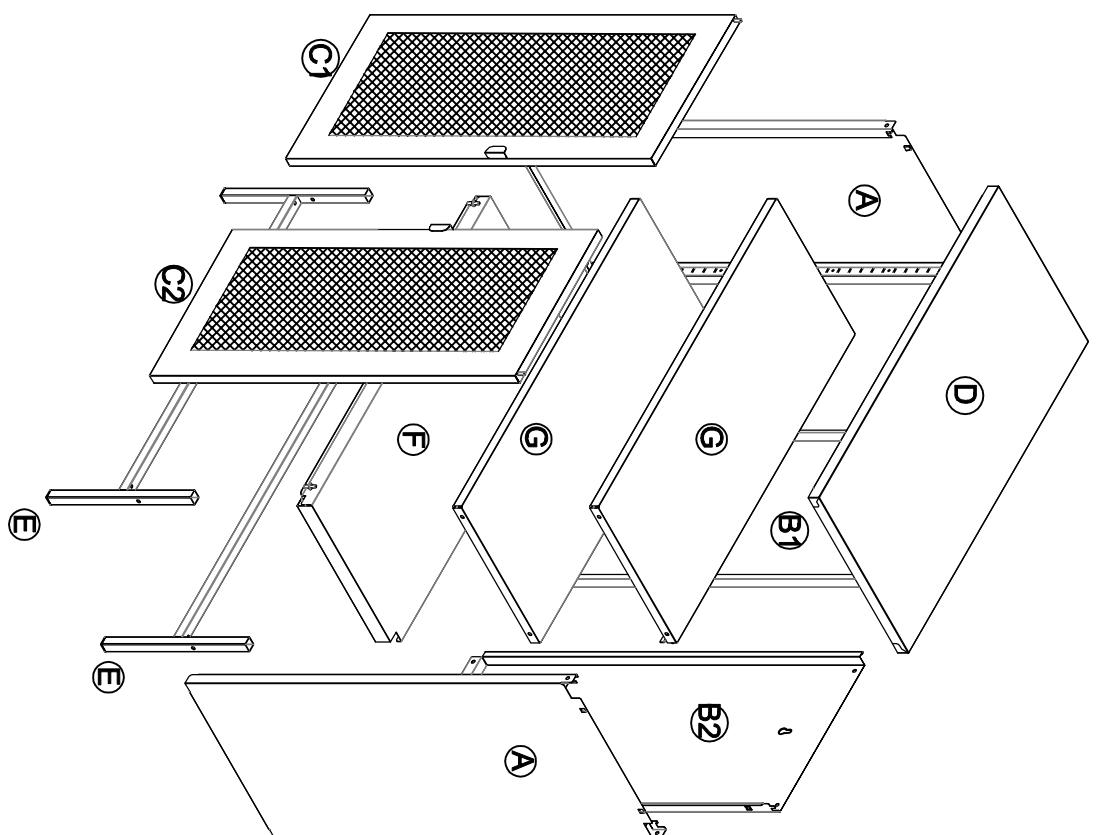


(4) - Attach (F) to (A) & (B) & (E) as below shown.

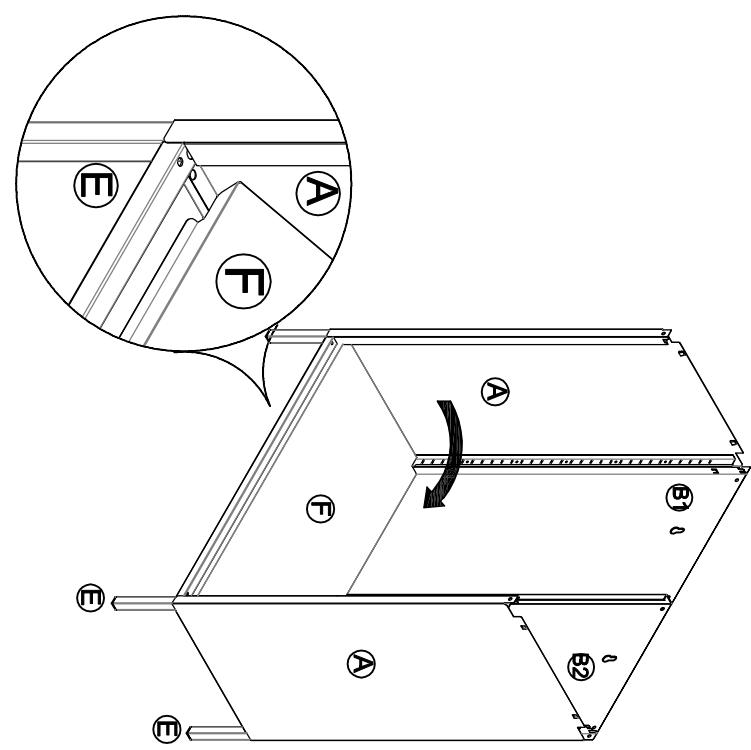


(5) - Attach (D) to (A) as below shown.

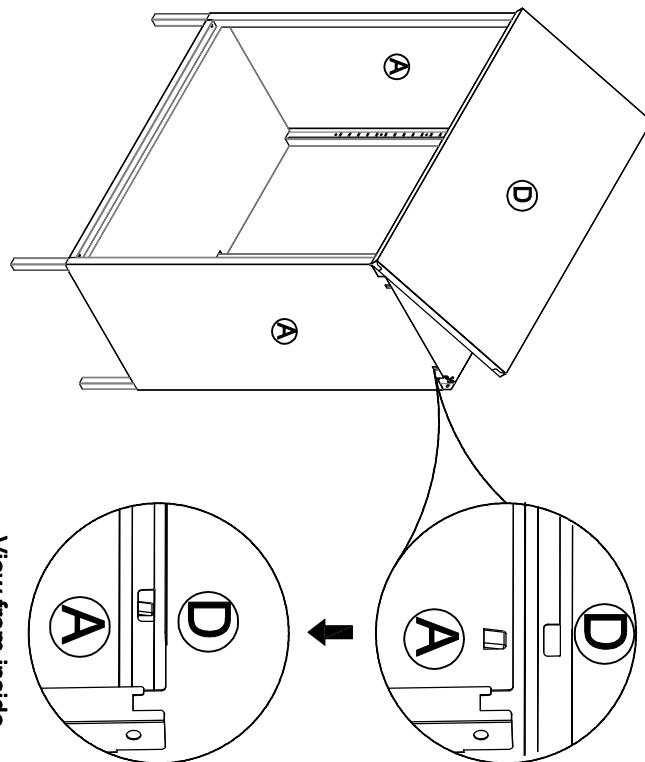


(6) - Attach (G) to pre-assembled unit as below shown.

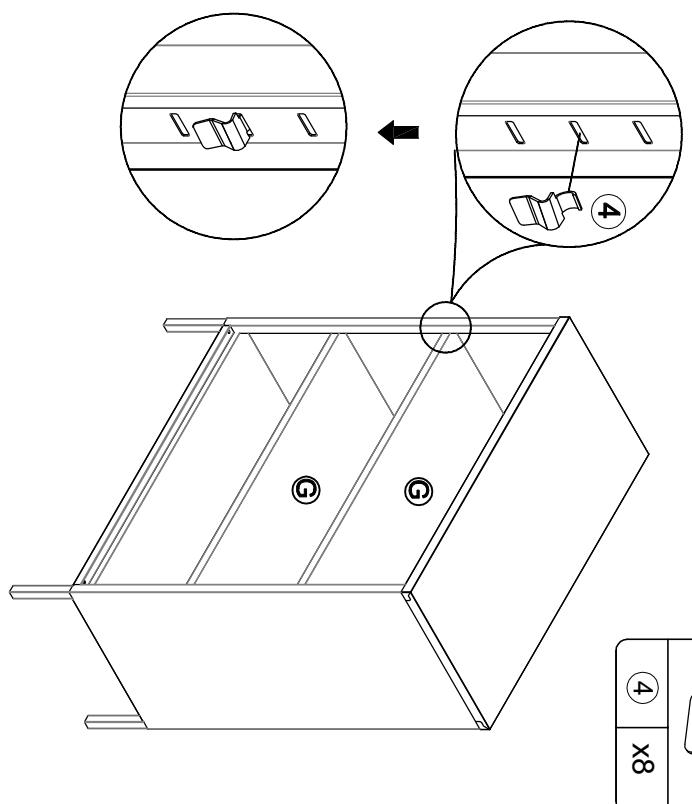

(7) - Attach (2) & (3) to pre-assembled unit as below shown.

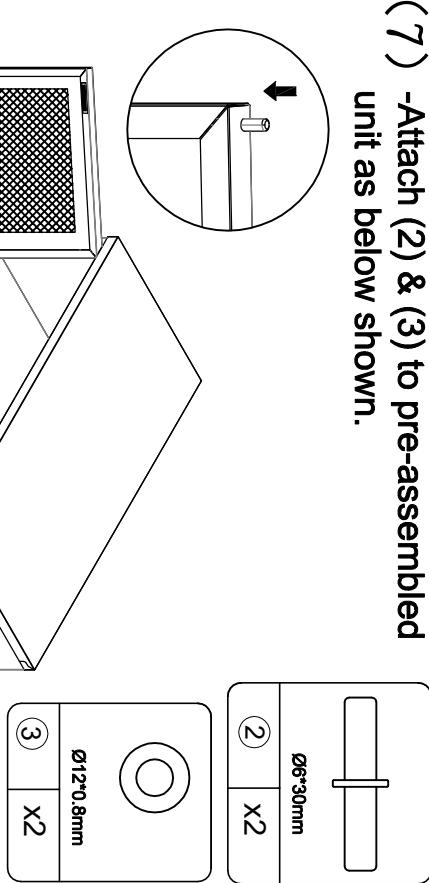


(8) - Attach (5) to (C1) & (C2) as below shown.

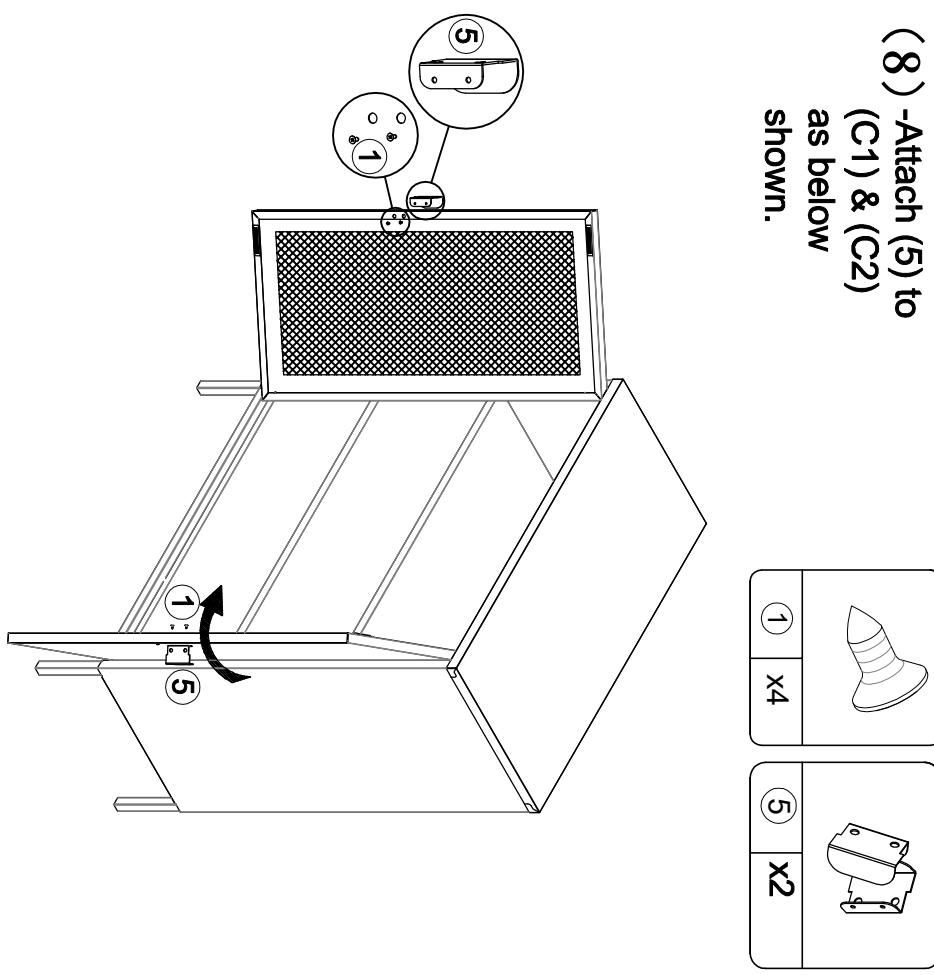

(9)

wall anchors

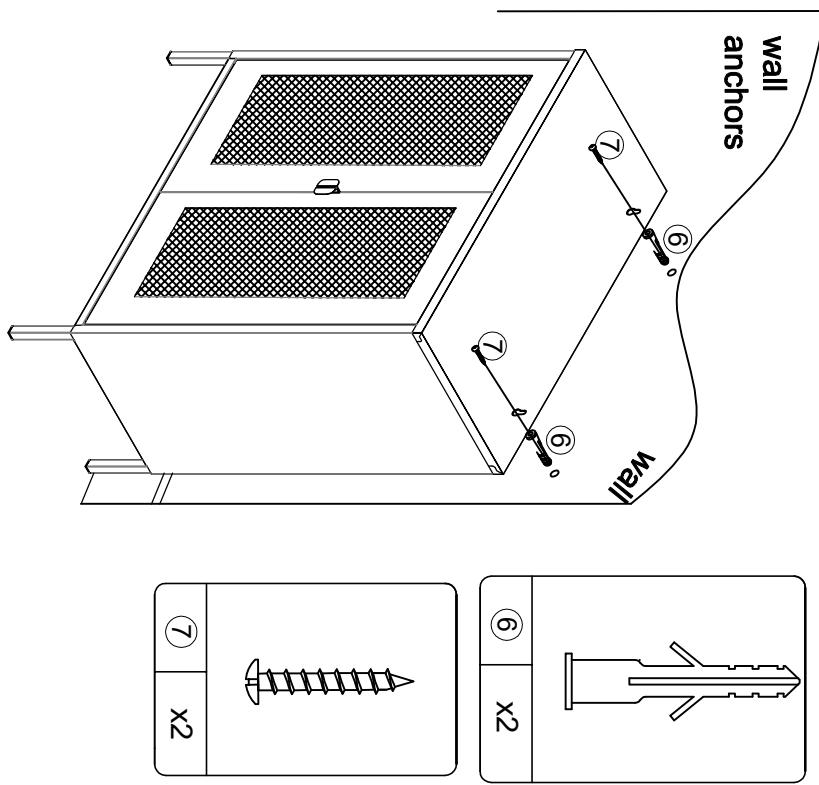

Gaps may appear between the top of the doors and the frame if the item is not on level ground; use the plastic foot cover to level.