


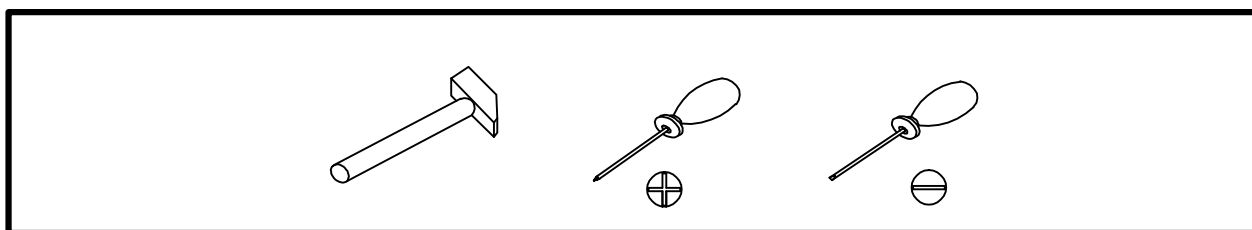
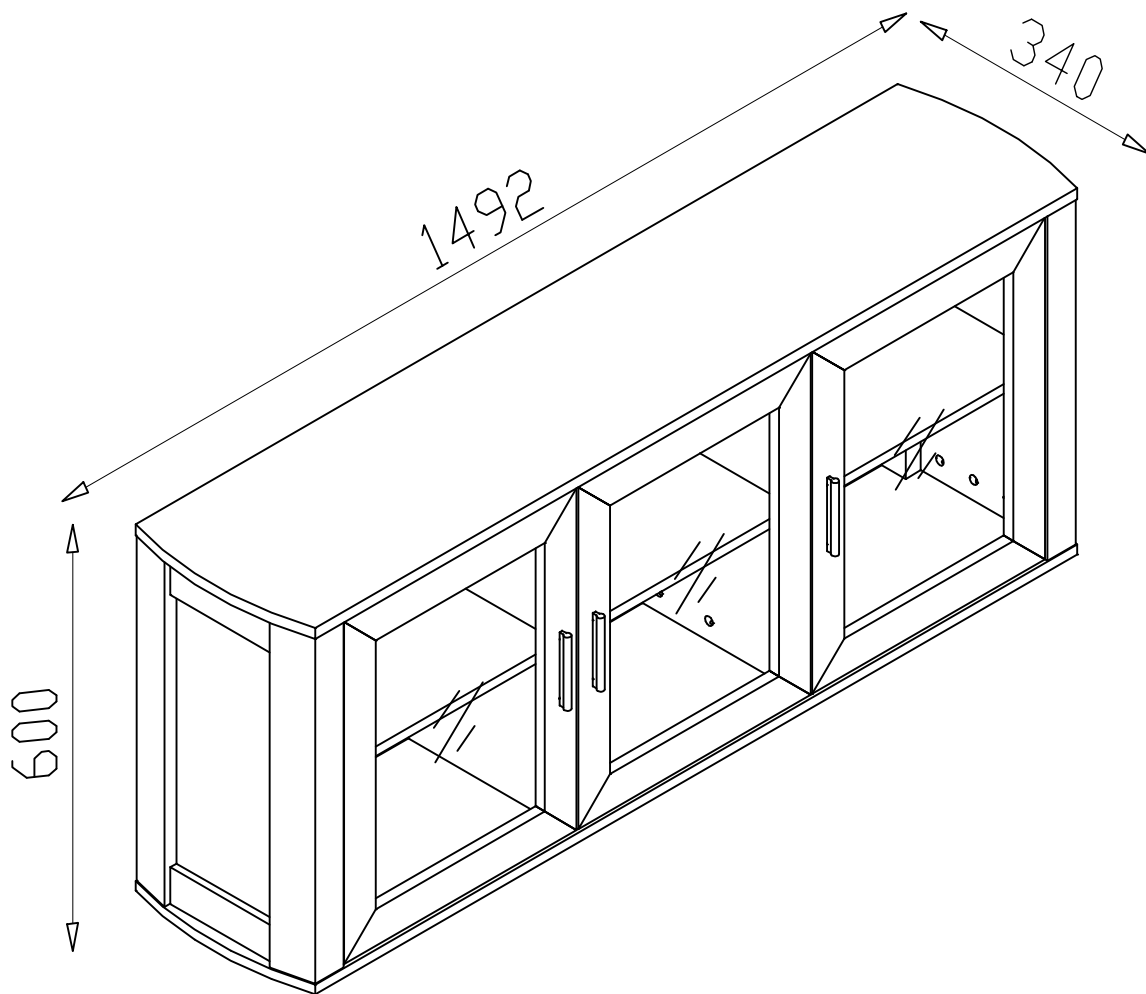
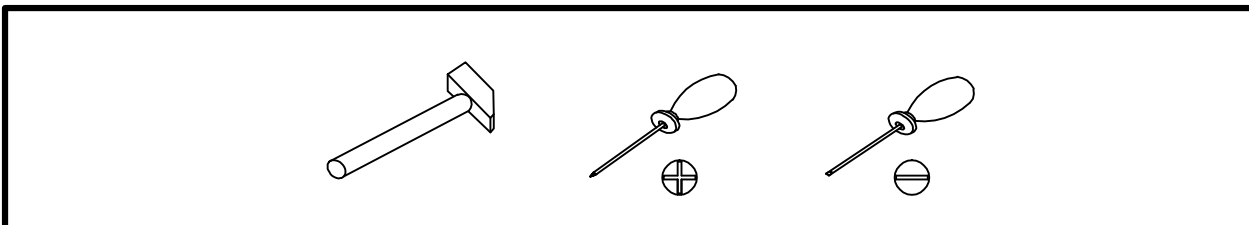
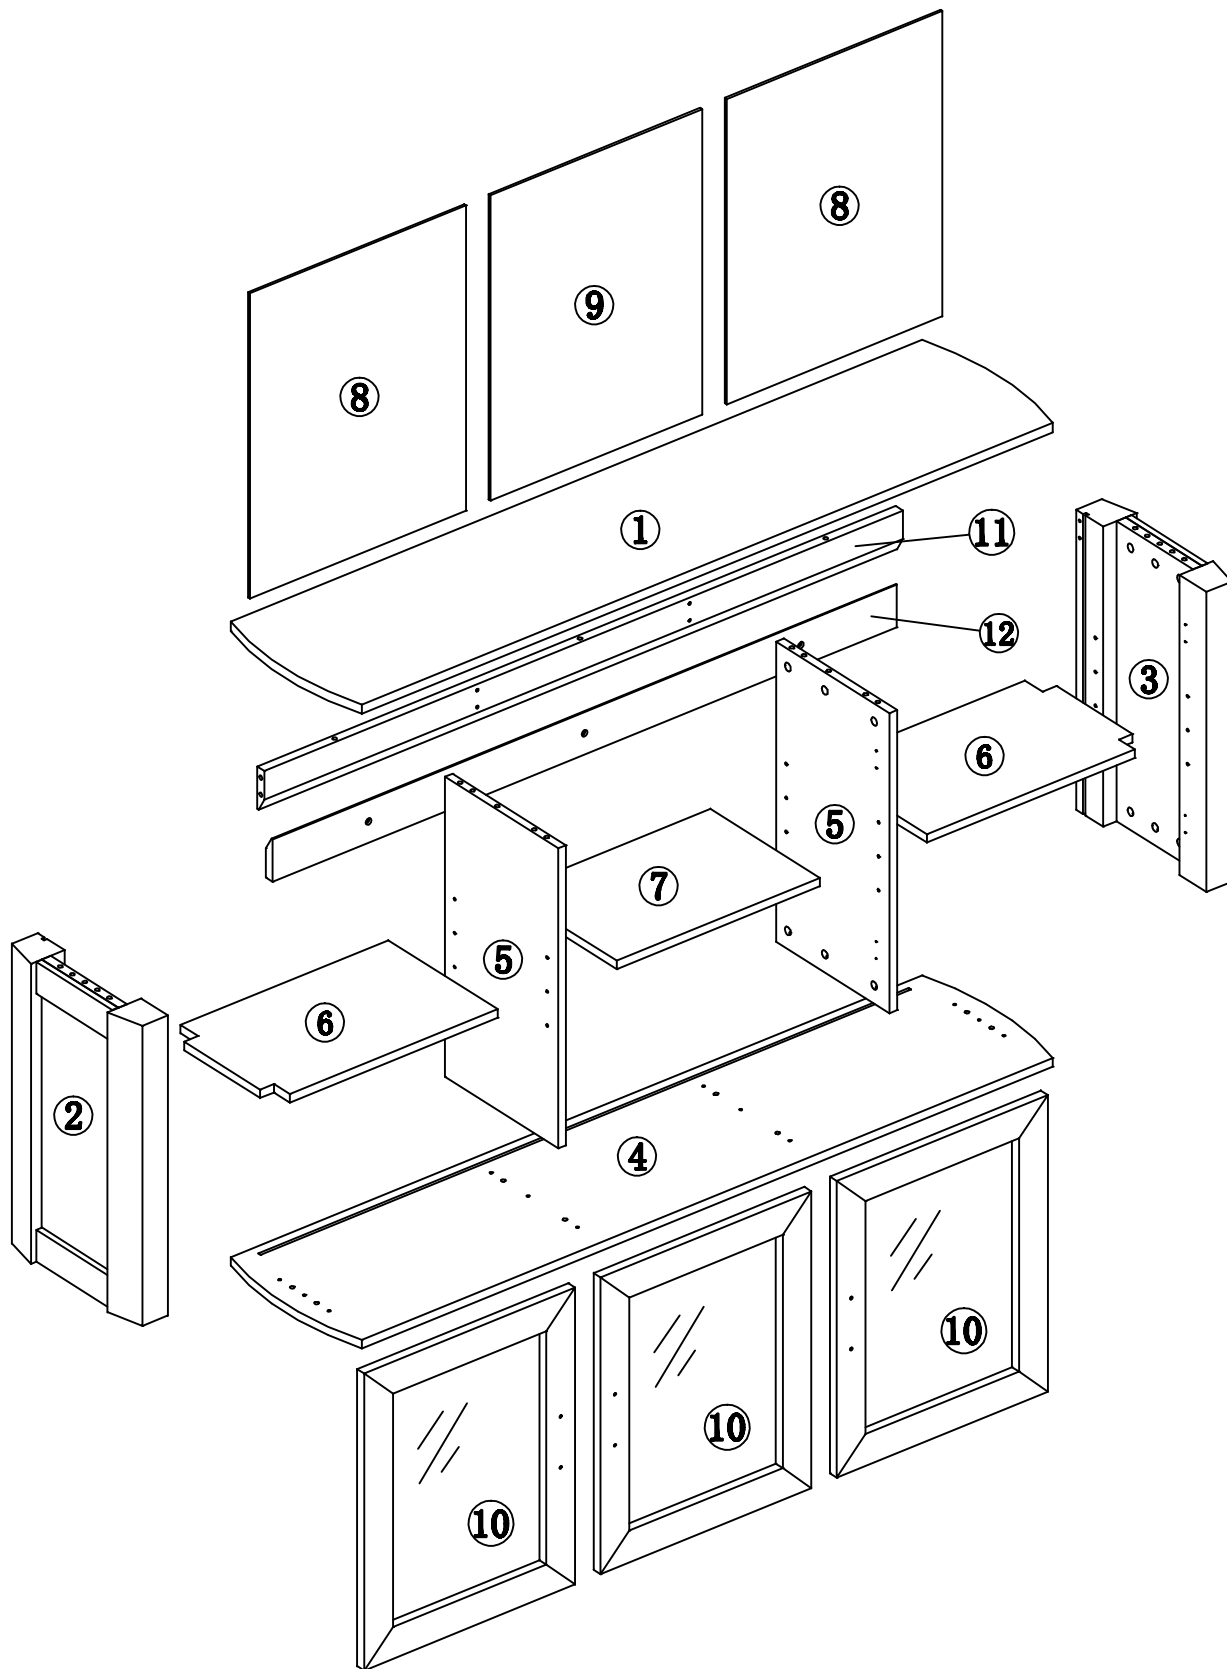
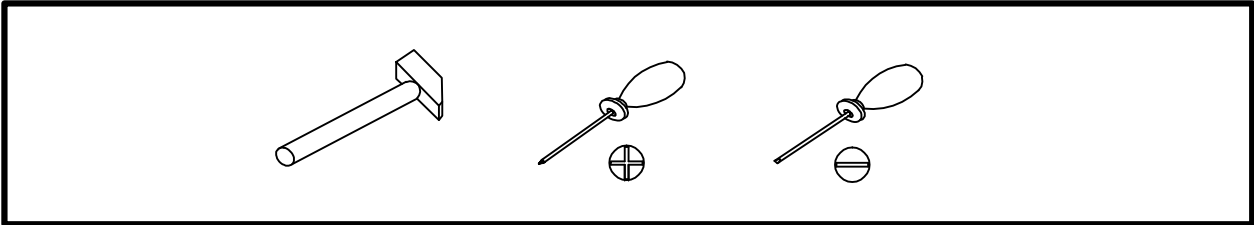



201610, 0011

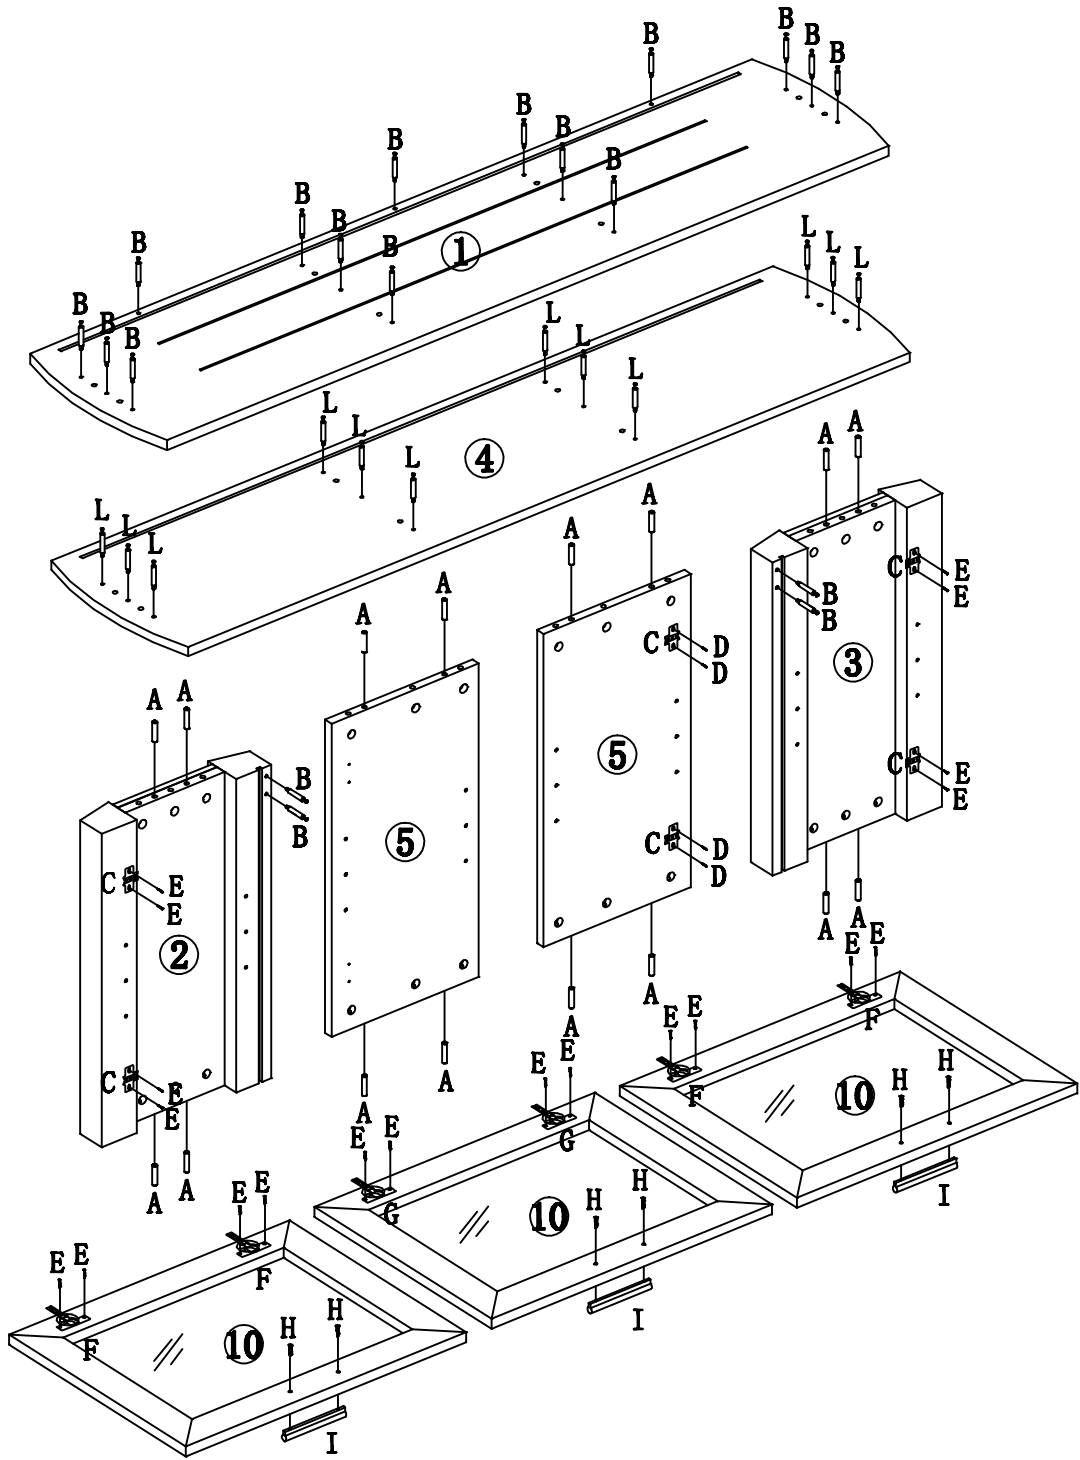




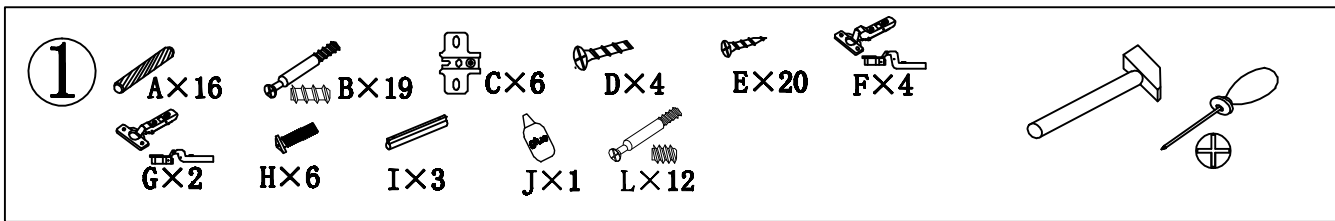


2


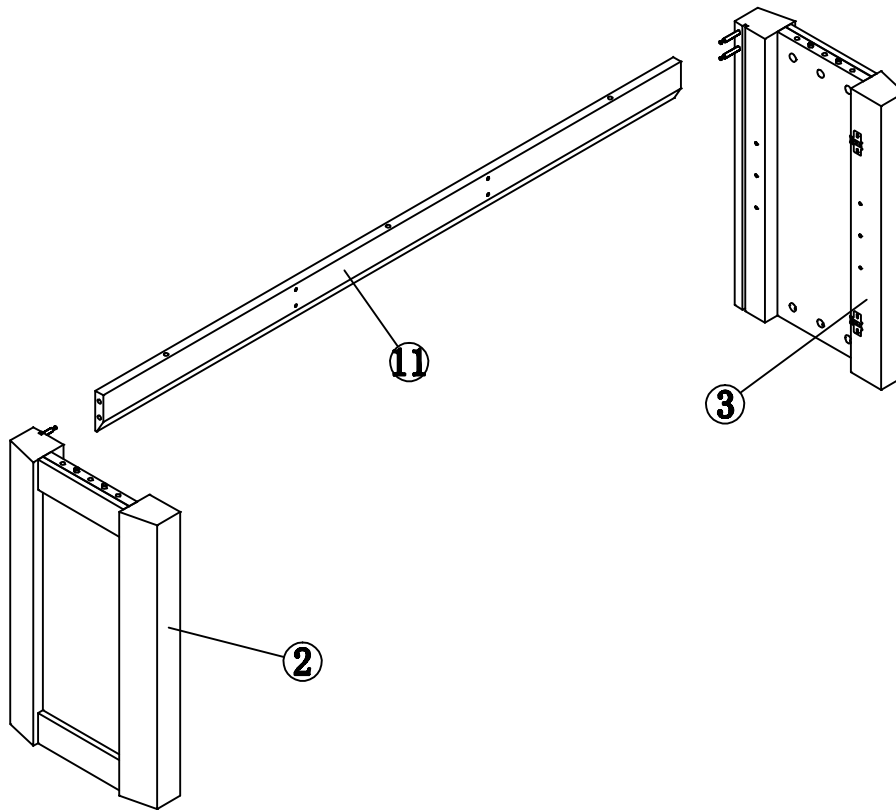


3




 K×12

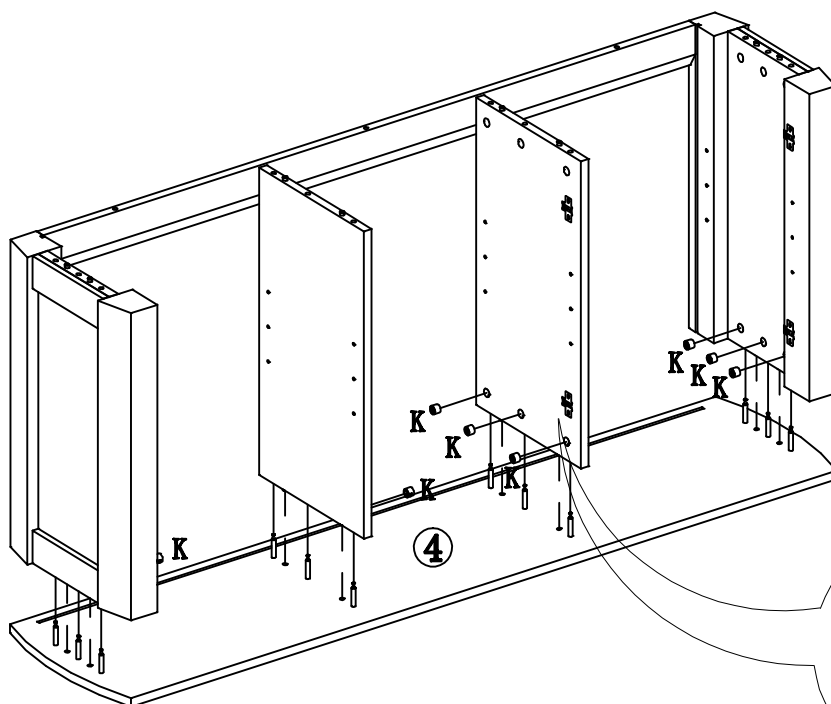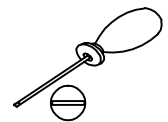

4

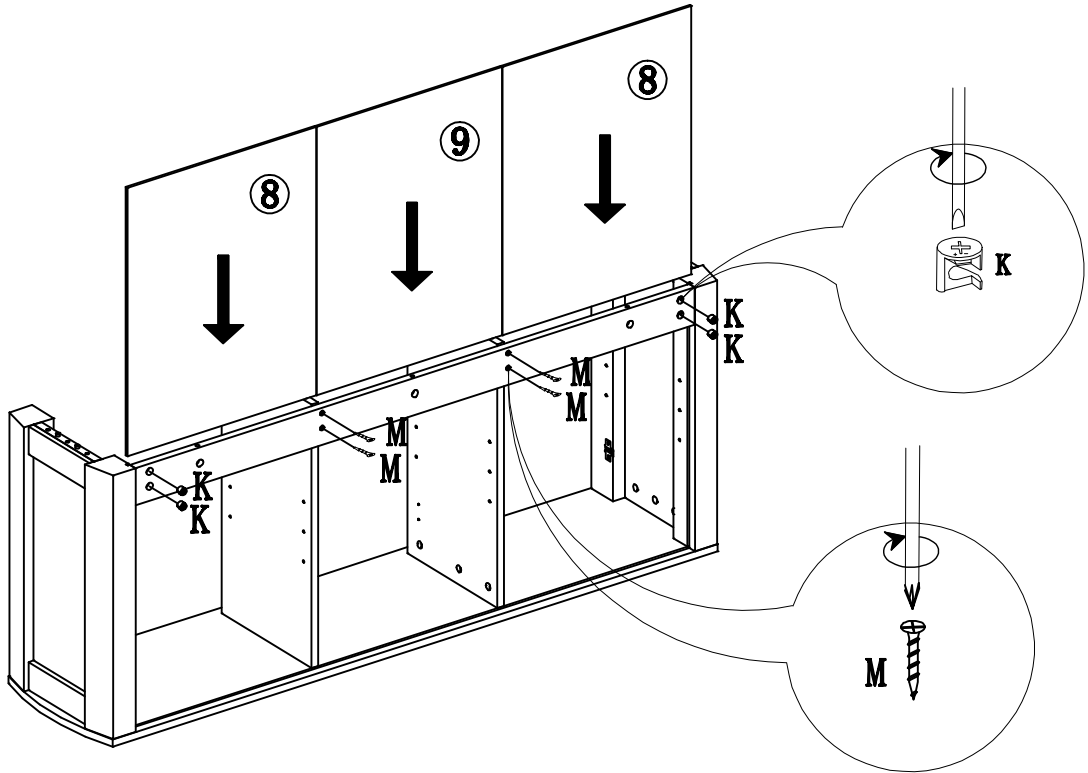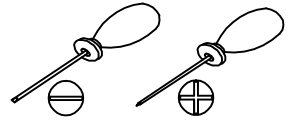



5

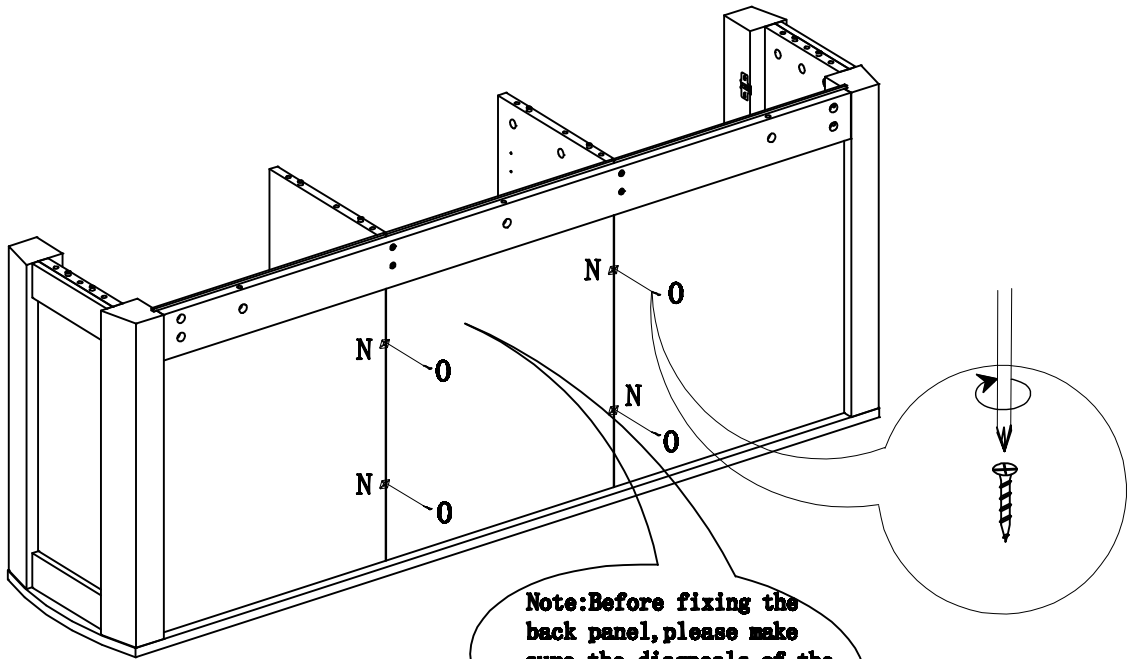

Note: Before fixing the back panel, please make sure the diagonals of the back panel have the same length.


6

 K×15

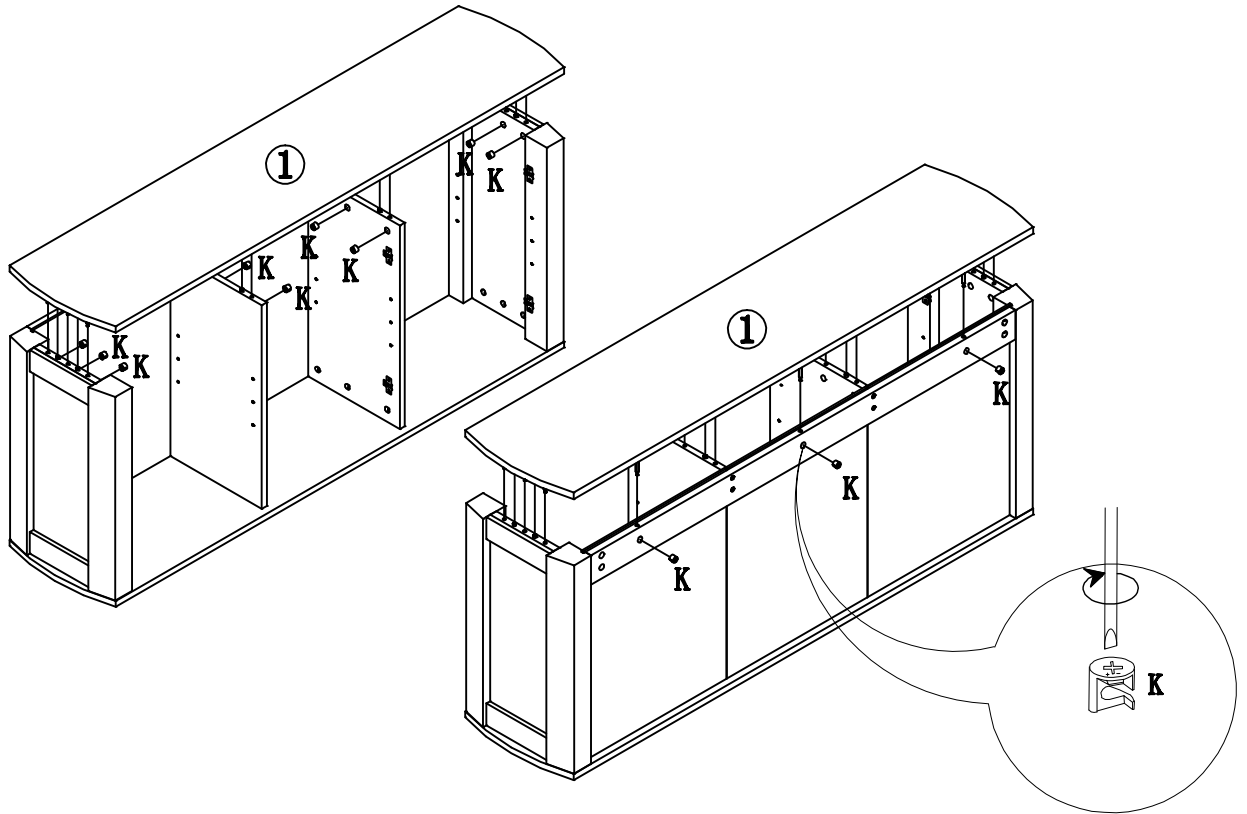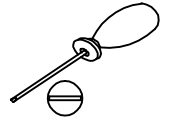

7

 P×12

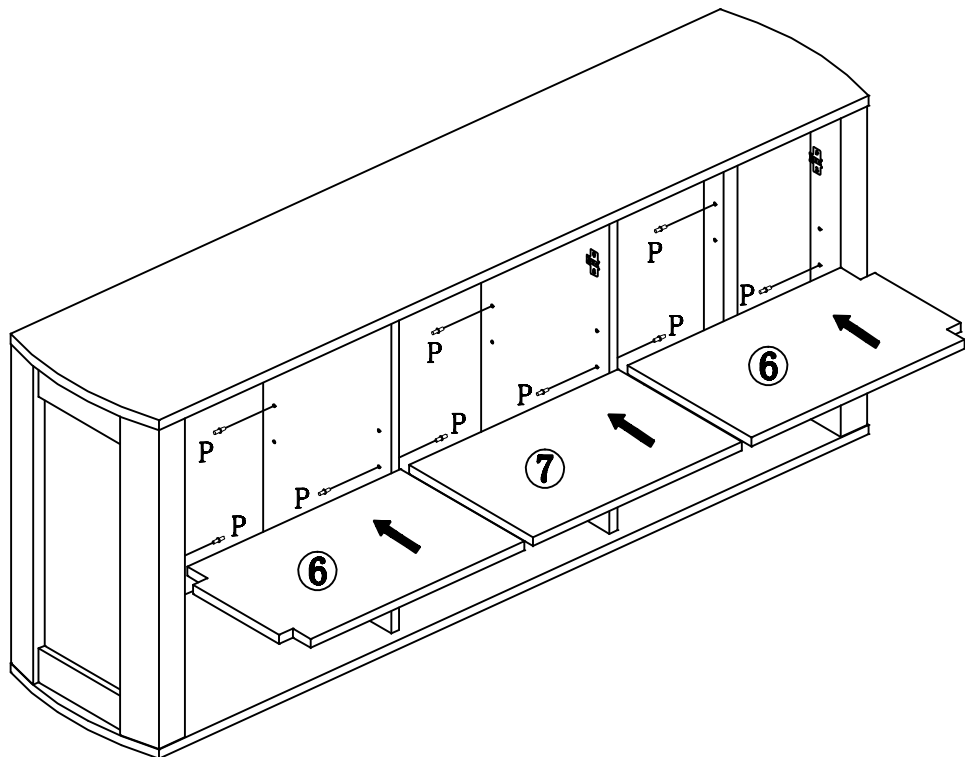

8

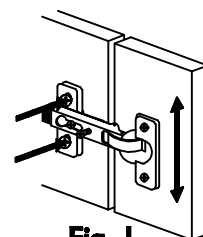
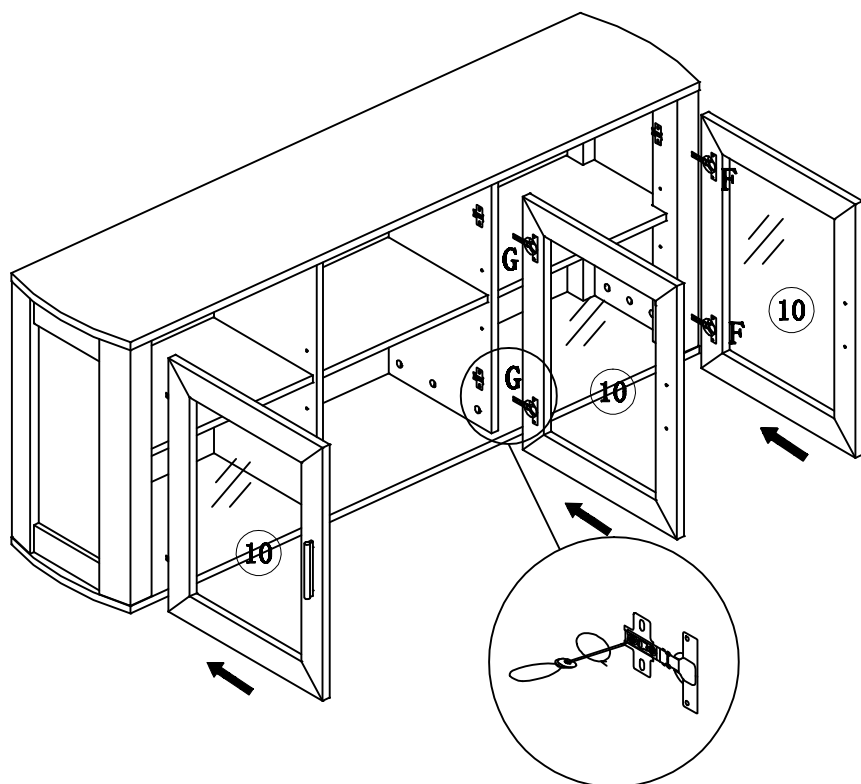


Fig. 1

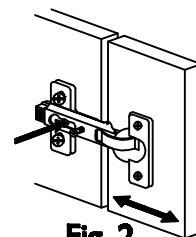


Fig. 2



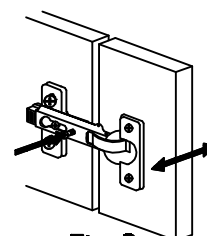


Fig. 3



9

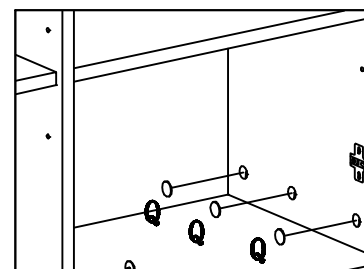

Qx24

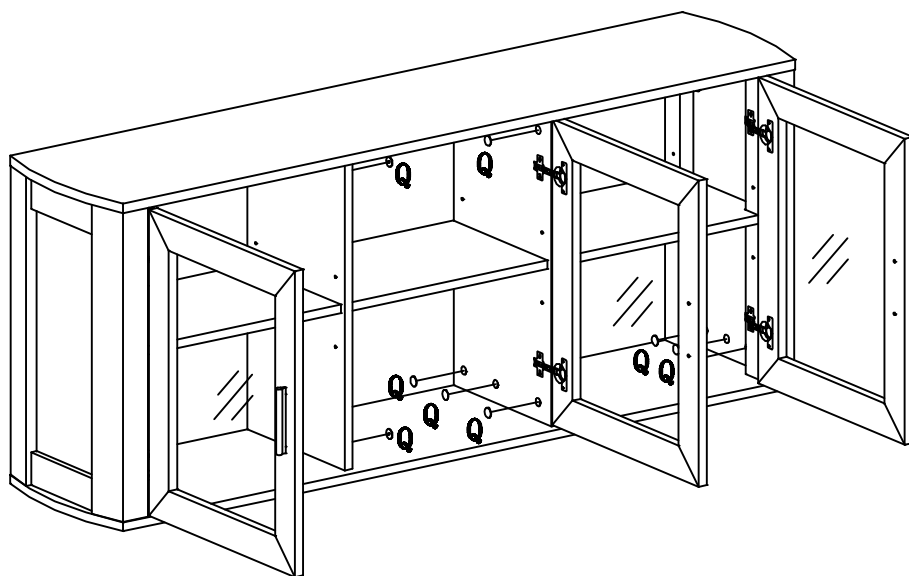

10

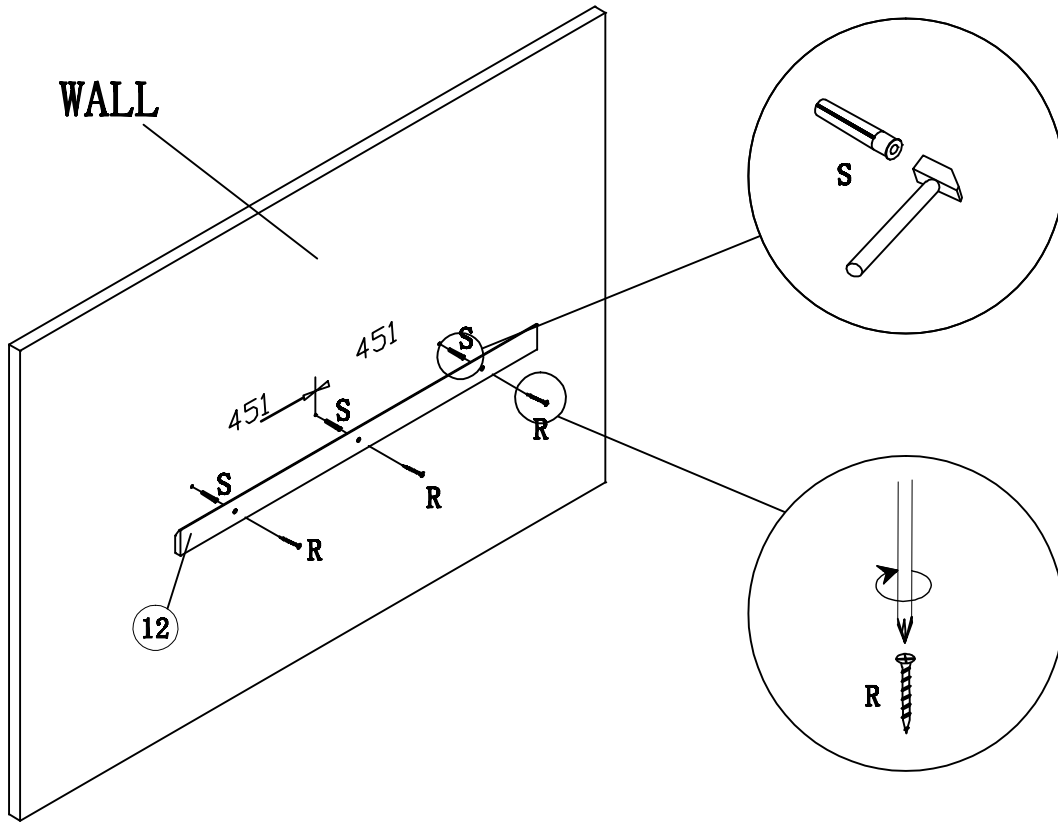

11

